



# Processing Instructions Cork Laying WAKOL D 3540 Cork Contact Adhesive

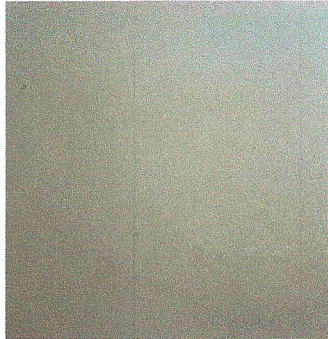

1. Start with a smooth level and dust free cement based subfloor.




2. Apply adhesive with shorthair velour roller on cork backing.

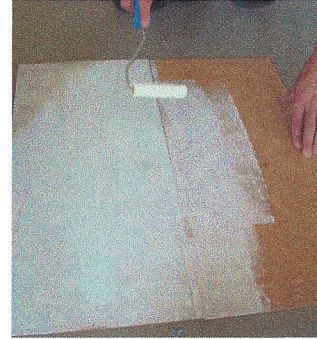

3. Apply adhesive evenly and fully to cork backing, forming a complete adhesive film. Avoid adhesive pools.




4. Apply adhesive with shorthair velour roller on subfloor.

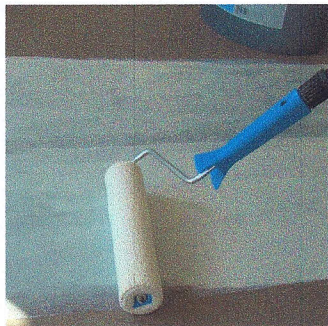

5. Apply adhesive evenly and fully to subfloor, forming a complete adhesive film. Avoid adhesive pools.



6. Wait until both adhesive films are dried and completely transparent.

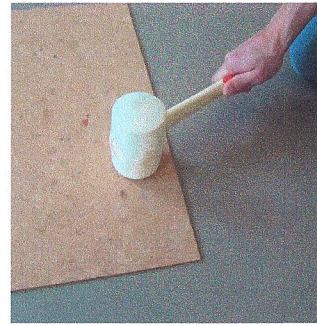

7. Lay down the cork tiles to fit and knock tightly and completely with a rubber hammer to ensure a complete bond formation.



8. Lay down further cork tiles to fit and knock tightly with a rubber hammer.



**WAKOL®**  
Anspruch verbindet